


R3

无线模块SN标签贴纸定位框

Quick Start Guide


Without Microinverter

If the On-grid power exceeds 800 W, please have the installation carried out by a qualified electrician to avoid safety risks.



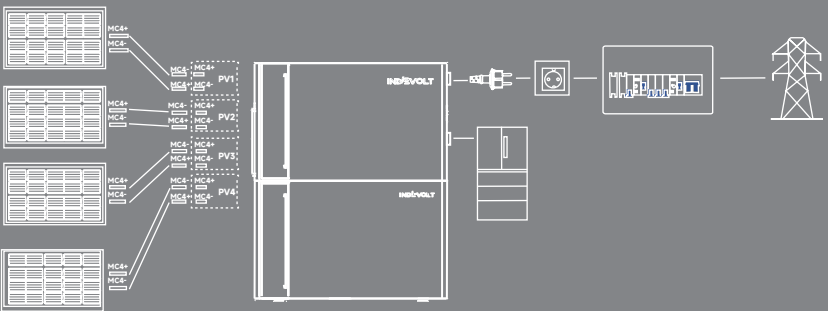


With Microinverter

Install in compliance with local regulations. If the device's feed-in power exceeds local requirements, the system will automatically disconnect from the micro-inverter to meet safety standards.

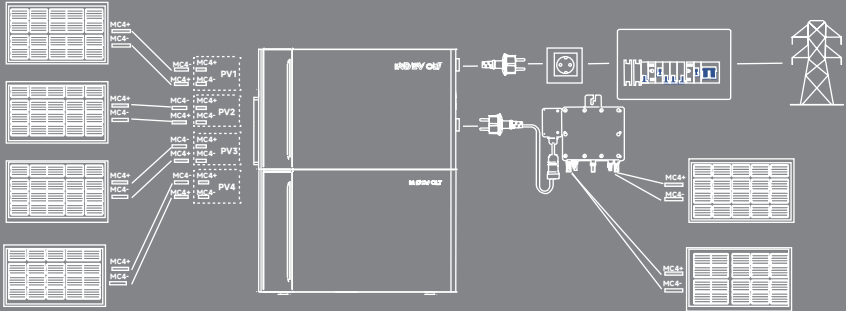

- 1 Connect each set of PV modules to each set of PV input ports.
- 2 Connect device to an outlet with the AC/Schuko cable.
- 3 Press the power button for 2 seconds.

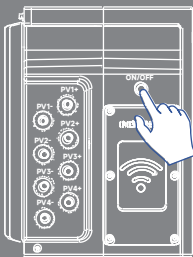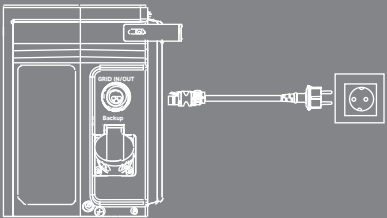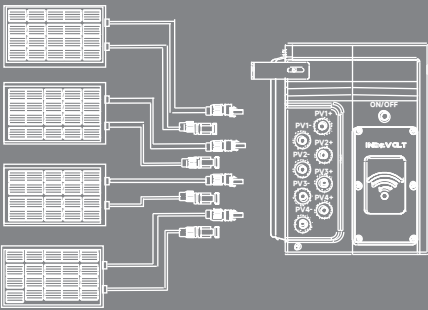


Warning!

Hot surface
Please avoid touching!



25mm*20mm

LED Light

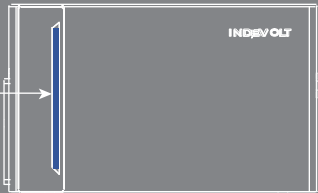

Charging

LED shows green and illuminates from the current battery SOC level to the top.

Discharging

LED shows blue and fades from current battery SOC level to the bottom.

Offline

LED shows yellow and current battery SOC.

Standby

LED shows blue and current battery SOC.

Fault

LED shows red.

365mm